

HMS-Artnr	Beskrivelse	Leverandørens artnr
233257	Audiosplitter Roger Multimedia Hub stereo	038-3107
289808	Belteklemme Roger Select	055-3030
233249	Belteklemme Roger TouchScreen Mic	004-4031
217184	Bordstativ Roger Passaround	005-3121
289800	Bæreveske Roger Multimedia Hub/Roger Passaround/Roger Select/Roger Tabel Mic II/Roger TouchScreen Mic mikrofoner	017-0908
233254	Bæreveske Roger Passaround	017-3313
298211	Deskstand for Digimaster V2	052-3150
233296	Festedeksel Roger 14	055-3014
256549	Fjernkontroll Roger Focus II	076-0065-P5
255316	Fjernkontroll Roger Table Mic II	055-4094-P5
195335	Gulvstativ Roger Digimaster 5000/7000	052-3164
289809	Halssnor Roger Select	055-3029
289798	Klemme Roger Digimaster 5000/7000	004-3382-001
289806	Ladeadapter Roger Neckloop	055-4101
206719	Ladekabel Roger Multimedia Hub/Roger Passaround/Roger Select/Roger Tabel Mic II/Roger TouchScreen Mic Mikro USB-til-USB 1,3m	075-3003
289802	Ladekabel Roger Neckloop USB-A til USB-C kabel 1m	043-3093
217182	Ladekoffert Roger Charging Case	055-4087
206717	Lader Roger Multimedia Hub/Roger Passaround/Roger Select/Roger Tabel Mic II/Roger TouchScreen Mic 5V/1A US/EU u/kabel	075-3000-20
217180	Ladestasjon Roger 4 enheter m/strømforsyning	055-3010
289810	Ladestasjon Roger Charging Rack 16-enheter	055-4088
289807	Ladestasjon Roger Select	055-3025
217183	Mikrofon Roger TouchScreen Mic m/jack 3,5 mm	055-3009
233279	Mottaker CI Roger 14 Beige	052-3222-D02M1
233278	Mottaker CI Roger 14 Black	052-3222-D02L9
233276	Mottaker CI Roger 14 Brown	052-3222-D02L0
233280	Mottaker CI Roger 14 Charcoal	052-3222-D02M2
233281	Mottaker CI Roger 14 Mocha	052-3222-D02T1
233282	Mottaker CI Roger 14 Smoke	052-3222-D02T2
233277	Mottaker CI Roger 14 White	052-3222-D02L8
233293	Mottaker CI Roger 17 Alpine White	052-3235-D02XN
233290	Mottaker CI Roger 17 Caribbean Pirate	052-3235-D02Q3
233284	Mottaker CI Roger 17 Chestnut	052-3235-D02P4
233291	Mottaker CI Roger 17 Dragon Orange	052-3235-D02Q4
233289	Mottaker CI Roger 17 Electric Green	052-3235-D02Q2
233288	Mottaker CI Roger 17 Petrol	052-3235-D02Q1
233294	Mottaker CI Roger 17 Princess Pink	052-3235-D02XP

233287	Mottaker CI Roger 17 Ruby	052-3235-D02P9
233283	Mottaker CI Roger 17 Sand Beige	052-3235-D02P1
233285	Mottaker CI Roger 17 Silver Gray	052-3235-D02P6
233292	Mottaker CI Roger 17 Vanity Pink	052-3235-D02Q5
233286	Mottaker CI Roger 17 Velvet Black	052-3235-D02P8
289813	Mottaker CI Roger 20 Black	056-3008-L92
289814	Mottaker CI Roger 20 Brown	056-3008-T12
289815	Mottaker CI Roger 20 Grey	056-3008-T22
289811	Mottaker CI Roger 20 Sand Beige	056-3008-M12
301359	Mottaker CI Roger 20 Silver	056-3008-5A2
289812	Mottaker CI Roger 20 White	056-3008-L82
289816	Mottaker CI Roger 21 Anthracite	052-3469-D02V1
289817	Mottaker CI Roger 21 Beige	052-3469-D02V2
289818	Mottaker CI Roger 21 Black	052-3469-D02V3
289819	Mottaker CI Roger 21 Ebony	052-3469-D02V4
289820	Mottaker CI Roger 21 Nordic Grey	052-3469-D02V5
289821	Mottaker CI Roger 21 White	052-3469-D02V6
289797	Nettverksforsterker Roger Basestation/Roger Touchscreen Mic Roger Repeater	052-3476
233253	Pose Roger Touchscreen	017-3310
232612	Sender Roger BaseStation	052-3342
233255	Skjermbeskyttelse Roger Touchscreen	017-3323
289799	Skruesett Roger Digimaster 5000/7000 skivesett	052-3163
289822	Slangesett Roger Focus II/Roger Focus II 312	054-0894
289805	Slynge Roger Neckloop CA hodetelefon	055-4032
289804	Slynge Roger Neckloop kort	043-4003-1
289803	Slynge Roger Neckloop lang	043-4002-1
195336	Stativ Roger Digimaster 5000/7000	052-3444
289801	Strømforsyning Roger Neckloop USB 5V 1A	075-0020-12
200042	Tilkobler Roger WallPilot	052-3115
233275	Transportveske Roger Digimaster 5000/7000	052-3124-0000001
195347	Veggfeste Roger Digimaster 5000/7000	052-3428
239739	Veggfeste Roger Multimedia Hub/Roger Repeater	055-3026
233256	Veske Roger Table Mic II	017-4004
233250	Veske Roger TouchScreen Mic	017-3272