

Reservedeler - Sonova AS

HMS-Artnr	Beskrivelse	Leverandørens artnr
195337	Adapter Roger Select	052-0370
170010	Adapter Roger Table Mic II Cinch audiokabel	052-0371
289836	Adapter Roger Wallpilot	075-0002-12
233258	Adapterkabel Roger TouchScreen Mic	043-3070
289890	Barnesikring Roger Focus II-312 Silver Grey	048-3009-P6
289891	Barnesikring Roger Focus II-312 Velvet Grey	048-3009-P8
255318	Batteri Roger Multimedia Hub/Roger TouchScreen Mic	070-3026-000001
289871	Batteri Roger Neckloop Lithium Polymer 3.7 VDC	070-4004
255319	Batteri Roger Passaround Mic	070-3028-000001
289864	Batteri Roger Select	070-3029-000001
289845	Batteri Roger Table Mic II	070-4001-000001
289835	Batteri Roger Wallpilot 3,7V 1150mAh	070-3033
289851	Batteriholder Roger Select	005-3110-1
289830	Batteriholder Roger Wallpilot	004-3903-001
289839	Beskyttelse Roger TouchScreen Mic	055-3021-R7
255277	Bryter Roger Multimedia Hub/Roger TouchScreen Mic av og på	004-4049-P51
255275	Bryter Roger Passaround Mic mute	004-4020-P51
255302	Bryter Roger Wallpilot av og på	046-3016-001
289903	Deksel bunn Roger DigiMaster 5000	004-3669-001
289894	Deksel bunn Roger DigiMaster 7000	004-3921-001
289857	Deksel bunn Roger Select (Champagne)	042-3016-P51
289858	Deksel bunn Roger Select (Graphite Gray)	042-3016-P71
289859	Deksel bunn Roger Select (Pearl White)	042-3016-W31
289901	Deksel grill Roger DigiMaster 5000	003-3194-1
289892	Deksel grill Roger DigiMaster 7000	003-3120-1
289831	Deksel gummforing Roger Wallpilot	005-3105-1
255278	Deksel mikrofon Roger Passaround Mic	004-4052-001
289934	Deksel Roger 14 Beige	052-3265-000M1
289933	Deksel Roger 14 Black	052-3265-000L9
289931	Deksel Roger 14 Brown	052-3265-000L0
289935	Deksel Roger 14 Charcoal	052-3265-000M2
289936	Deksel Roger 14 Mocha	052-3265-000T1
289937	Deksel Roger 14 Smoke	052-3265-000T2
289932	Deksel Roger 14 White	052-3265-000L8
289929	Deksel Roger 17 Alpine White	052-3185-000XN
289926	Deksel Roger 17 Caribbean Pirate	052-3185-000Q3
289920	Deksel Roger 17 Chestnut	052-3185-000P4
289927	Deksel Roger 17 Dragon Orange	052-3185-000Q4
289925	Deksel Roger 17 Electric Green	052-3185-000Q2
289924	Deksel Roger 17 Petrol	052-3185-000Q1
289930	Deksel Roger 17 Princess Pink	052-3185-000XP
289923	Deksel Roger 17 Ruby	052-3185-000P9
289919	Deksel Roger 17 Sand Beige	052-3185-000P1
289921	Deksel Roger 17 Silver Gray	052-3185-000P6
289928	Deksel Roger 17 Vanity Pink	052-3185-000Q5
289922	Deksel Roger 17 Velvet Black	052-3185-000P8
289908	Deksel Roger 21 Anthracite	048-3005-V1
289909	Deksel Roger 21 Beige	048-3005-V2
289910	Deksel Roger 21 Black	048-3005-V3
289911	Deksel Roger 21 Ebony	048-3005-V4
289912	Deksel Roger 21 Nordic Grey	048-3005-V5
289913	Deksel Roger 21 White	048-3005-V6
289887	Deksel Roger Focus II Alpine White	048-3007-T7
289878	Deksel Roger Focus II Beige	048-3007-H0
289880	Deksel Roger Focus II Blue Ocean	048-3007-M7
289885	Deksel Roger Focus II Caribbean Pirate	048-3007-Q3
289884	Deksel Roger Focus II Electric Green	048-3007-Q2
289879	Deksel Roger Focus II Lava Red	048-3007-M6
289881	Deksel Roger Focus II Majesty Purple	048-3007-M8

Reservedeler - Sonova AS

289886	Deksel Roger Focus II Precious Pink	048-3007-T3
289882	Deksel Roger Focus II Silver Grey	048-3007-P6
289883	Deksel Roger Focus II Velvet Black	048-3007-P8
289888	Deksel Roger Focus II-312 Silver Grey	048-3008-P6
289889	Deksel Roger Focus II-312 Velvet Black	048-3008-P8
255279	Deksel Roger Multimedia Hub	004-4091-P51
289939	Deksel Roger Neckloop	042-4004-P51
289841	Deksel Roger Table Mic II	004-4197-1
255280	Deksel Roger TouchScreen Mic	004-4092-P51
255272	Deksel Roger Wallpilot innvendig plate for hovedkort	004-3904-001
289829	Deksel Roger Wallpilot utvendig bakplate	004-3681-001
289902	Deksel topp komplett Roger DigiMaster 5000	004-3440-001
289893	Deksel topp komplett Roger DigiMaster 7000	004-3920-001
289828	Deksel topp Roger Wallpilot	004-3658-001
289824	Deksel topp Roger X	004-3526-P51
289904	Elektronikk Roger DigiMaster 5000	045-3299-1
289899	Elektronikk Roger DigiMaster 5000/7000	045-3301-1
289898	Feste Roger DigiMaster 5000/7000	004-3441-001
255276	Festeknapp til halssnor Roger TouchScreen Mic	004-4029-001
289838	Filter Roger TouchScreen Mic	004-4074-061
289876	Folie Roger Multimedia Hub/Roger Passaround Mic/Roger TouchScreen Mic	021-0949
289856	Folie Roger Select	024-3078
255288	Folie Roger TouchScreen Mic	017-3323-1
244034	Halssnor Roger TouchScreen Mic	055-3005
255281	Hoveddeksel Roger Passaround Mic	004-4093-P51
289941	Hovedelektronikk Roger Basestation	052-3342-0000002
255312	Hovedelektronikk Roger Multimedia Hub	052-3299-0000002
289938	Hovedelektronikk Roger Neckloop	056-4004-0000002
255306	Hovedelektronikk Roger Passaround Mic	052-3261-0000002
289861	Hovedelektronikk Roger Select (Champagne)	052-3473-000P502
289862	Hovedelektronikk Roger Select (Graphite Gray)	052-3473-000P702
289863	Hovedelektronikk Roger Select (Pearl White)	052-3473-000W302
289844	Hovedelektronikk Roger Table Mic II	052-4117-000P502
255311	Hovedelektronikk Roger TouchScreen Mic Roger Touchscreen Mic REF	052-3297-0000002
255285	Isolasjonsmatte Roger Multimedia Hub/Roger TouchScreen Mic	005-3181-1
289865	Kabel microUSB til 3.5mm jack Roger Select microUSB til 3.5mm jack	043-3085
169960	Kabel Roger DigiMaster 5000/7000	052-3096
195345	Kabel Roger Multimedia Hub/Roger Table Mic II/Roger TouchScreen Mic audiokabel 1m	052-0359
289875	Kabel Roger Multimedia Hub/Roger Table Mic II/Roger TouchScreen Mic stereokabel 3,5mm / 1m	052-3205
289866	Kabel Roger Select	052-0423
289843	Kabel Roger Table Mic II USB splitter	043-4000
255323	Kabel Roger Wallpilot USB til Mini-USB	075-3004
289940	Kit for batteribytte Roger Neckloop kit til bytte	070-4004-000001
255292	Kontakt Roger Multimedia Hub/Roger TouchScreen Mic	038-3100-1
289823	Lader Roger Focus II BTE RIC	075-3016-12
255322	Lader Roger Table Mic II dobbel 5V/2A uten kabel	075-3002-20
255324	Lader strømforsyning Roger Basestation/Roger Charging rack 5,3V 4A US/EU	075-3007-20
255282	Lysstyring Roger Passaround Mic	004-4094-001
289868	Mikrofonoppheng keglereflekterende Roger Passaround Mic	004-3993-001
289869	Mikrofonoppheng skumdome Roger Passaround Mic	005-3180-1
289827	Ramme Roger Wallpilot	004-3551-001
289877	Sikkerhetsinformasjon Roger Multimedia Hub/Roger Passaround Mic/Roger TouchScreen Mic	029-3211
289870	Skilt Roger Neckloop	024-4018
255299	Skjerm Roger Wallpilot	045-3327-1
233297	Skjermbeskyttelse Roger TouchScreen Mic	055-3021
289852	Skrue deksel Roger Select (Champagne)	005-3196-P51
289853	Skrue deksel Roger Select (Graphite Gray)	005-3196-P71
289854	Skrue deksel Roger Select (Pearl White)	005-3196-W31
289826	Skrue PT Roger Wallpilot sort K15 x 6	002-3058-1
255262	Skrue Roger 14 0,7mm x 2 mm	002-0403-1
255263	Skrue Roger 17 0,8mm x 4,6mm	002-0405-1

Reservedeler - Sonova AS

289897	Skrue Roger DigiMaster 5000/7000 Phillips M3x8 10 stk	002-3099-1
289896	Skrue Roger DigiMaster 5000/7000 Phillips PA2x10 10 stk	002-3098-1
289872	Skrue Roger Multimedia Hub/Roger TouchScreen Mic torx M1,6mm x 5mm	002-3148-1
289873	Skrue Roger Multimedia Hub/Roger TouchScreen Mic torx M1,6mm x 7 mm	002-3149-1
289867	Skrue Roger Passaround Mic	002-3147-1
289846	Skrue Roger Select	002-3026-1
289847	Skrue Roger Select 1,2mm x 2,8mm	002-3133-1
289840	Skrue Roger Table Mic II EJOT Delta PT 20 WN 5452/6 IP L=8	002-4004-1
289842	Skrue Roger Table Mic II TX29 D5,5x2,4	005-4006-1
289837	Skrue Roger TouchScreen Mic/Roger Multimedia Hub 1,5mm x 4,3mm	002-3063-1
255264	Skrue til akkumulatordeksel Roger Wallpilot	002-3057-1
289874	Skrueholder Roger Multimedia Hub/Roger TouchScreen Mic	005-3176-1
289900	Skruesett Roger DigiMaster 5000/7000 veggfeste	052-3431
255265	Splint Roger 14 0,4mm x 5,60mm	002-3111-1
289906	Splint Roger 21 0,55mm x 6,77mm	002-3375-1
289905	Splint Roger 21 0,55mm x 7,80mm	002-3280-1
255266	Splint Roger X titan 0,55 x 8,33mm	002-3119-1
255294	SRM Roger 14	045-3236-1D02
255296	SRM Roger 17	045-3240-1D02
289915	SRM Roger 20 Black	056-3008-L920001
289917	SRM Roger 20 Brown	056-3008-T120001
289918	SRM Roger 20 Grey	056-3008-T220001
289916	SRM Roger 20 Sand Beige	056-3008-M120001
289914	SRM Roger 20 White	056-3008-L820001
289907	SRM Roger 21	045-3462-1D02
289895	SRM Roger DigiMaster 7000	045-3305-1
289942	SRM Roger Focus II	045-3006-1D02
289860	SRM Roger Select	045-3473-1
255297	SRM Roger Wallpilot	045-3244-1
289825	SRM Roger X	045-3203-1X02
289848	Strømbryter Roger Select (Champagne)	004-4158-P51
289849	Strømbryter Roger Select (Graphite Gray)	004-4158-P71
289850	Strømbryter Roger Select (Pearl White)	004-4158-W31
169959	Strømforsyning Roger DigiMaster 5000/7000 19V 3,42A	052-3141
289833	Type plate V3 Roger Wallpilot	024-3908-001
289832	Typeskilt Roger Wallpilot	024-0071-001
289834	Verktøy Roger Wallpilot	026-3013
289855	Veske Roger Select	017-3344
233295	Ytre dekselsett Roger Wallpilot	052-3242