

HMS-Artnr	Beskrivelse	Leverandørens artnr
252951	Batteri 3,6V/2,35Ah hø kort kabel Multishell/Tynset/Heli Ski/Fjellvott Sr/Tolga/Heli Ski Finger/Tallberg/Baby Zip/Fjellvott Jr/Heli Ski Jr/Goretex Jr/Junior Zip/Trysil/Prima/Monty/Herkules/Zevs/Splitt/Bowie/Termo	100110-hk
309444	Batteri 3,6V/2,35Ah rett lang kabel Ull Tykk/Mico	100110-rl
252952	Batteri 3,6V/2,35Ah ve kort kabel Multishell/Tynset/Heli Ski/Fjellvott Sr/Tolga/Heli Ski Finger/Tallberg/Baby Zip/Fjellvott Jr/Heli Ski Jr/Goretex Jr/Junior Zip/Trysil/Prima/Monty/Herkules/Zevs/Splitt/Bowie/Termo	100110-vk
252955	Batteri 3,6V/6,4Ah hø kort kabel Multishell/Tynset/Heli Ski/Fjellvott Sr/Tolga/Heli Ski Finger/Tallberg/Baby Zip/Fjellvott Jr/Heli Ski Jr/Goretex Jr/Junior Zip/Trysil/Prima/Monty/Herkules/Zevs/Splitt/Bowie/Termo	100130-hk
309445	Batteri 3,6V/6,4Ah rett lang kabel Ull Tykk/Mico/Sege	100130-rl
252956	Batteri 3,6V/6,4Ah ve kort kabel Multishell/Tynset/Heli Ski/Fjellvott Sr/Tolga/Heli Ski Finger/Tallberg/Baby Zip/Fjellvott Jr/Heli Ski Jr/Goretex Jr/Junior Zip/Trysil/Prima/Monty/Herkules/Zevs/Splitt/Bowie/Termo	100130-vk
309446	Batteri 3,6V/9,6Ah rett lang kabel Ull Tykk/Mico/Sege	100140-rl
252961	Batteri 7,2V/3,2Ah hø kort kabel Multishell/Tynset/Heli Ski/Fjellvott Sr/Tolga/Heli Ski Finger/Tallberg/Handy Aktiv/Monty/Herkules/Zevs/Splitt/Bowie/Termo	100150-hk
309447	Batteri 7,2V/3,2Ah rett lang kabel Ull Tykk	100150-rl
252962	Batteri 7,2V/3,2Ah ve kort kabel Multishell/Tynset/Heli Ski/Fjellvott Sr/Tolga/Heli Ski Finger/Tallberg/Handy Aktiv/Monty/Herkules/Zevs/Splitt/Bowie/Termo	100150-vk
309448	Batteri 7,2V/6,4Ah rett lang kabel Ull Tykk	100160-rl
252976	Batteri Clip-On 3,6V/2,35Ah Multishell/Tynset/Heli Ski/Fjellvott Sr/Tolga/Heli Ski Finger/Tallberg/Handy Aktiv/Baby Zip/Fjellvott Jr/Heli Ski Jr/Goretex Jr/Junior Zip/Trysil/Prima/Monty/Herkules/Zevs/Splitt/Ull Tykk/Mico/Sege/Bowie/Termo	100410
252977	Batteri Clip-On 3,6V/6,4Ah / 7,2V/3,2Ah Multishell/Tynset/Heli Ski/Fjellvott Sr/Tolga/Heli Ski Finger/Tallberg/Handy Aktiv/Baby Zip/Fjellvott Jr/Heli Ski Jr/Goretex Jr/Junior Zip/Trysil/Prima/Monty/Herkules/Zevs/Splitt/Ull Tykk/Mico/Bowie/Termo	100450
252979	Batteri Clip-On 3,6V/9,6Ah Multishell/Tynset/Heli Ski/Fjellvott Sr/Tolga/Heli Ski Finger/Tallberg/Baby Zip/Fjellvott Jr/Heli Ski Jr/Goretex Jr/Junior Zip/Trysil/Prima/Monty/Herkules/Zevs/Splitt/Bowie/Termo	100460
252978	Batteri Clip-On 7,2V/6,4Ah Multishell/Tynset/Heli Ski/Fjellvott Sr/Tolga/Heli Ski Finger/Tallberg/Handy Aktiv/Monty/Herkules/Zevs/Splitt/Ull Tykk/Bowie/Termo	100470
252971	Batteribånd 32cm 3,6V/2,35Ah Mico/Sege/Bowie	100310-32
252972	Batteribånd 45cm 3,6V/2,35Ah Ull Tykk/Bowie	100310-45
252974	Batteribånd 45cm 3,6V/9,6Ah Ull Tykk/Bowie	100370-45
252973	Batteribånd 45cm 7,2V/3,2Ah Ull Tykk/Mico/Sege/Bowie	100350-45
252975	Batteribånd 45cm 7,2V/6,4Ah Ull Tykk/Bowie	100360-45
292825	Lader Twin Li-Ion 3,6V/7,2V Multishell/Tynset/Heli Ski/Fjellvott Sr/Tolga/Heli Ski Finger/Tallberg/Handy Aktiv/Baby Zip/Fjellvott Jr/Heli Ski Jr/Goretex Jr/Junior Zip/Trysil/Prima/Monty/Herkules/Zevs/Splitt/Ull Tykk/Mico/Sege/Bowie/Termo	100300
252970	Oppbevaringsveske tilbehør Multishell/Tynset/Heli Ski/Fjellvott Sr/Tolga/Heli Ski Finger/Tallberg/Handy Aktiv/Baby Zip/Fjellvott Jr/Heli Ski Jr/Goretex Jr/Junior Zip/Trysil/Prima/Monty/Herkules/Zevs/Splitt/Ull Tykk/Mico/Sege/Bowie/Termo	100500
252969	Skjøtekabel varmegjmt/batteripakke USBmini hun/hun I100 varmegjmt Minittech	100600-100
252980	Vaskepropp Multishell/Tynset/Heli Ski/Fjellvott Sr/Tolga/Heli Ski Finger/Tallberg/Handy Aktiv/Baby Zip/Fjellvott Jr/Heli Ski Jr/Goretex Jr/Junior Zip/Trysil/Prima/Monty/Herkules/Zevs/Splitt/Ull Tykk/Mico/Sege/Bowie/Termo	101100
252938	Vott beskytter joystickvott Splitt u/splitt/åpning hø liten batteri 3,6V/2,35Ah	630212-S-h
252940	Vott beskytter joystickvott Splitt u/splitt/åpning hø medium batteri 3,6V/2,35Ah	630212-M-h
252942	Vott beskytter joystickvott Splitt u/splitt/åpning hø stor batteri 3,6V/2,35Ah	630212-L-h
252936	Vott beskytter joystickvott Splitt u/splitt/åpning hø x liten batteri 3,6V/2,35Ah	630212-XS-h
309439	Vott beskytter joystickvott Splitt u/splitt/åpning hø xstor batteri 7,2V/3,2Ah	630212-XL-h
252934	Vott beskytter joystickvott Splitt u/splitt/åpning hø xx liten batteri 3,6V/2,35Ah	630212-XXS-h
309441	Vott beskytter joystickvott Splitt u/splitt/åpning hø xxstor batteri 7,2V/3,2Ah	630212-XXL-h
309437	Vott beskytter joystickvott Splitt u/splitt/åpning hø xxx liten batteri 3,6V/2,35Ah	630212-XXXS-h
309443	Vott beskytter joystickvott Splitt u/splitt/åpning hø xxxstor batteri 7,2V/3,2Ah	630212-XXXL-h
252937	Vott beskytter joystickvott Splitt u/splitt/åpning ve liten batteri 3,6V/2,35Ah	630212-S-v
252939	Vott beskytter joystickvott Splitt u/splitt/åpning ve medium batteri 3,6V/2,35Ah	630212-M-v
252941	Vott beskytter joystickvott Splitt u/splitt/åpning ve stor batteri 3,6V/2,35Ah	630212-L-v
252935	Vott beskytter joystickvott Splitt u/splitt/åpning ve x liten batteri 3,6V/2,35Ah	630212-XS-v
309438	Vott beskytter joystickvott Splitt u/splitt/åpning ve xstor batteri 7,2V/3,2Ah	630212-XL-v
252933	Vott beskytter joystickvott Splitt u/splitt/åpning ve xx liten batteri 3,6V/2,35Ah	630212-XXS-v
309440	Vott beskytter joystickvott Splitt u/splitt/åpning ve xxstor batteri 7,2V/3,2Ah	630212-XXL-v
309436	Vott beskytter joystickvott Splitt u/splitt/åpning ve xxx liten batteri 3,6V/2,35Ah	630212-XXXS-v
309442	Vott beskytter joystickvott Splitt u/splitt/åpning ve xxxstor batteri 7,2V/3,2Ah	630212-XXXL-v